

EPSON Stylus® C82N




Start Here




CPD-15266

1 Unpack


- 1 Remove everything from the box.

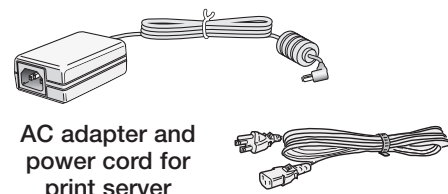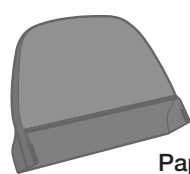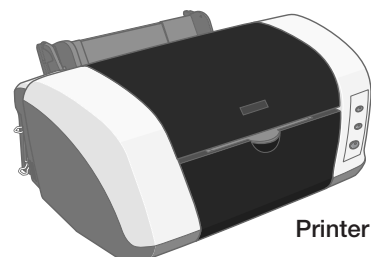


- 2 Remove all the blue tape and packing material inside and around the printer. The tape may be in slightly different places on your printer, so check carefully.

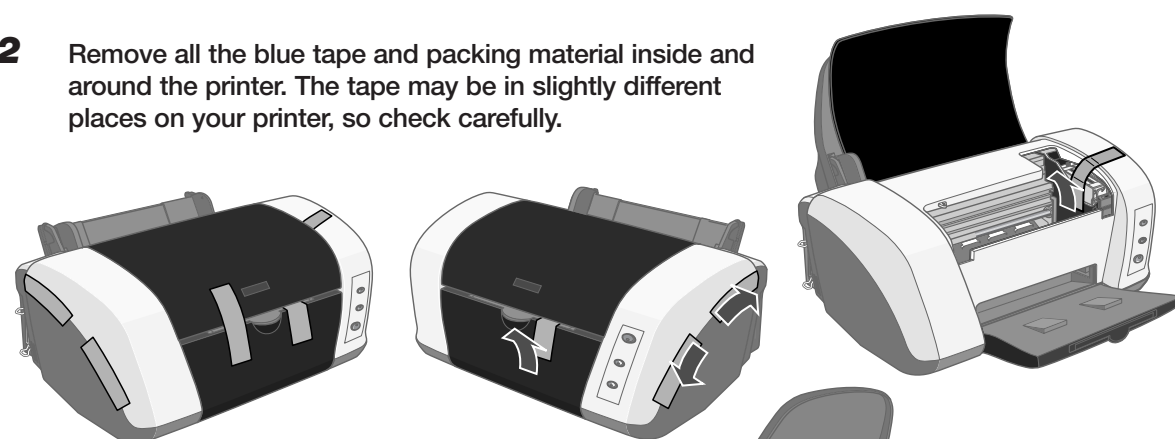


- 3 Slide the paper support into the grooves on either side of the sheet feeder. The paper support should fit securely.

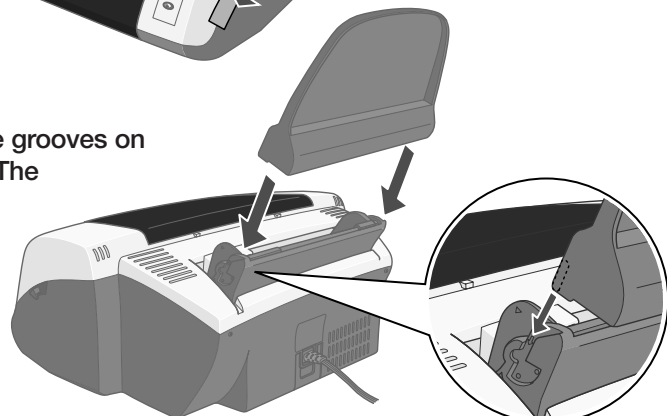

2 Power On


- 1 Plug the printer's power cord into a grounded electrical outlet.
- 2 Press the printer's  power button until the green power light comes on.

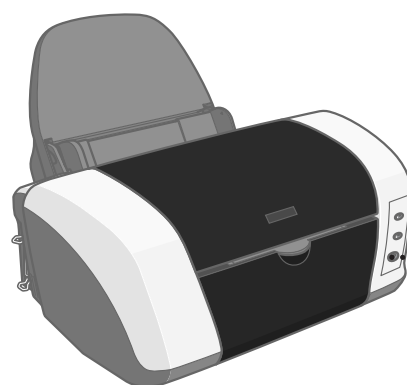


CAUTION: Use only the printer's  power button to turn the printer on or off.

3 Load Ink

- 1 Lower the printer's output tray and open the cover.
- 2 Shake the package of ink cartridges four or five times. Then remove the cartridges from the package. (Don't shake them after removing the packaging.)

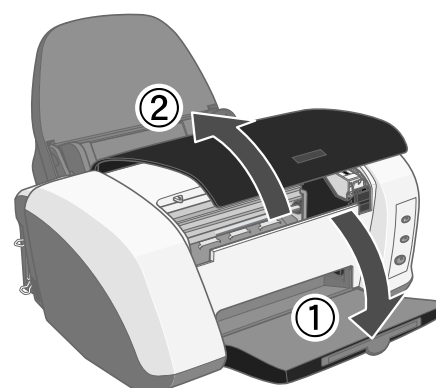


Don't touch the green circuit boards or remove any labels

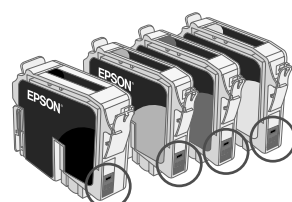


- 3 Lower each ink cartridge into its holder with the green circuit board facing the back. Then gently push each ink cartridge down until it is firmly seated.

The color of the cartridge label should match the marker on the holder.

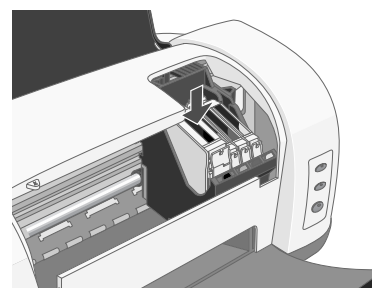

- 4 Press the  ink button and close the printer cover.

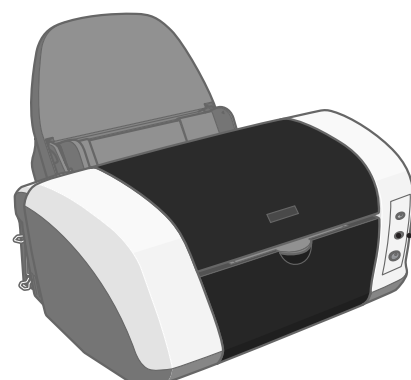


The green power light flashes as your printer charges ink for about 90 seconds.


CAUTION: Don't turn off the printer while the green power light is flashing unless the printer hasn't moved or made any noise for more than 5 minutes.

4 Load Paper

- 1 Fan a few sheets of paper and place them against the right edge guide. Don't push the paper in.

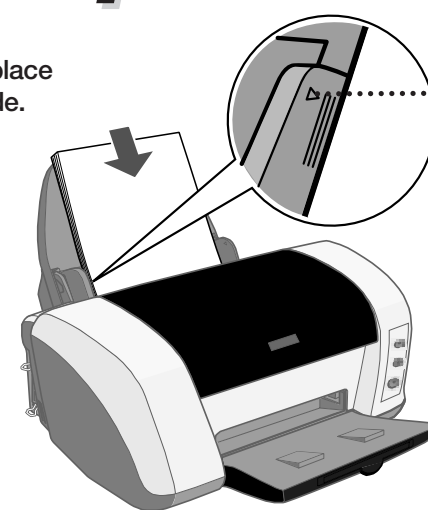


- 2 Slide the left edge guide against the paper, but not too tightly.
- 3 Pull out the output tray extensions.

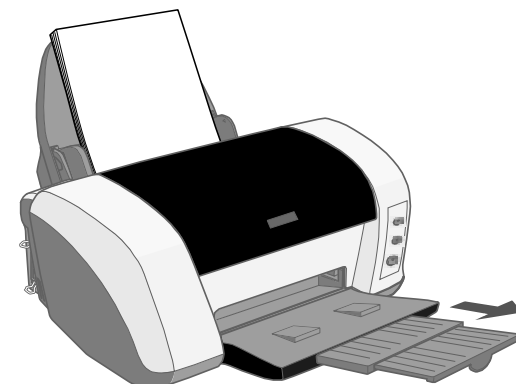


5 Connect the Print Server


- 1 Turn off the printer.
- 2 Plug the print server into the printer's parallel port. Squeeze the wire clips together until they lock in place on either side of the connector.
- 3 Connect the network cable to the 10/100 connector on the print server, and then connect the other end of the cable to a hub or switch. Use a Category 5 twisted pair straight-through cable with RJ45 connectors.

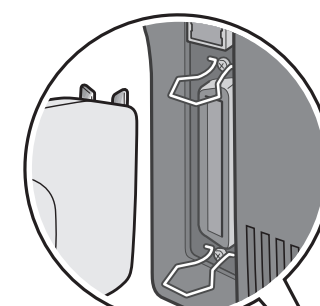

NOTE: The print server will automatically use DHCP to obtain an IP address. If it cannot get an IP address this way, it will use the private IP address of 192.168.192.168.

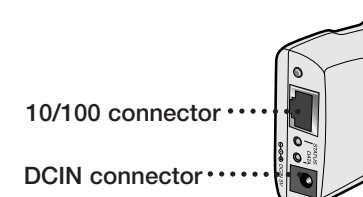

- 4 Plug the AC adapter into the DCIN connector on the print server. Connect the AC adapter's power cord to the AC adapter.

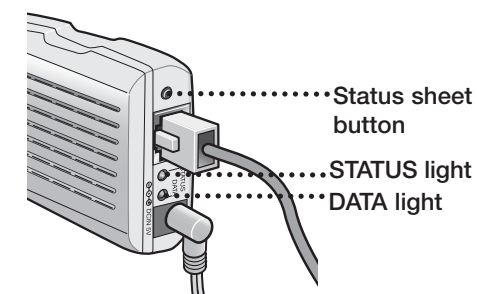

- 5 Plug the power cord of the AC adapter into a grounded electrical outlet. The lights on the print server will turn on.

- 6 Press and hold down the status sheet button on the print server, and then turn on the printer. Continue to hold down the status sheet button for about 5 seconds. The STATUS light turns red as the print server initializes, while the DATA light beneath it stays green.

NOTE: It can take up to one minute to initialize the print server. When it is done initializing, its STATUS light turns green or orange.

- 7 When the print server is done initializing, press the status sheet button again for about two seconds to print a report that is two pages long. If the status report prints, the print server is installed correctly.

CAUTION: Before disconnecting the print server from the printer, always turn off the printer and unplug the AC adapter.

6 Install Software

Follow the steps in the appropriate section below to install the printer software on Windows® XP, 2000, and NT 4.x, or on Macintosh®. To install on Windows Me, 98, or 95, see the *Supplement* booklet.


NOTE: These procedures set up the printer for TCP/IP printing on Windows, and for AppleTalk printing on Macintosh. For other network protocols, such as NetWare or NetBEUI, see the Administrator's Manual.

NOTE: All computers that use the printer with TCP/IP must be in the same IP subnetwork.

Windows XP, 2000, NT 4.x

- 1 Make sure the computer is properly connected to the network, and then turn it on. Make sure the printer and print server are still on.

- 2 Put the EPSON Printer Software CD-ROM in the drive.

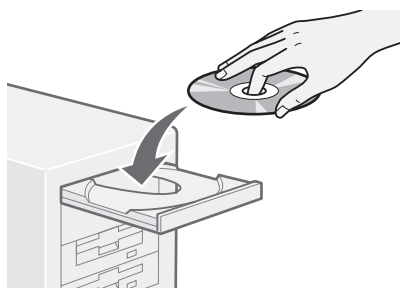

The EPSON Installation Program window appears.



 
- 3 Double-click **Install EpsonNet InstallWizard**. Follow the on-screen instructions to install the InstallWizard on the computer. An **EpsonNet InstallWizard** icon appears on the desktop.

- 4 Double-click the **EpsonNet InstallWizard** icon. InstallWizard searches the network, finds your printer, and displays it in a dialog box. This can take 20 to 30 seconds.

NOTE: InstallWizard may find more than one printer. Identify the printer by the name listed on the status report you printed out in section 5, "Connect the Print Server."



- 5 Select the check box next to your printer and click **Next**.



InstallWizard automatically installs the printer driver and configures the printer port. This takes about 10 seconds.

- 6 Make sure there is letter-size plain paper in the printer, and then click the **Print** button to print a test page. If the test page prints, the installation is successful.

- 7 Optionally, install Status Monitor, which is a utility to monitor and control the printer. To do this, double-click **Install EPSON Status Monitor**, and follow the instructions on the screen.

NOTE: Status Monitor creates some network traffic, so you may want to limit the number of users who have Status Monitor installed on their workstation. You can also turn it on and off. See the *Supplement* booklet for more information.

- 8 Optionally, do any of the following:

- Install the printer movies and *Reference Guide*. To do this, double-click **Install Printer Movies and Reference Guide** (you may have to scroll down to see this option). Then double-click the **EPIC** icon on the desktop to view the printer movies or the *Reference Guide*.
- Install EPSON Software™ Film Factory™ a photo management program. To do this, double-click **Install EPSON Software Film Factory** (you may have to scroll down to see this option), and then follow the on-screen instructions.
- View the print server *Administrator's Manual*. To do this, double-click **View Administrator's Manual** (you may have to scroll down to see this option). If you don't have Adobe® Acrobat® Reader™, install it when prompted.

- 9 Click the icon to close the EPSON Installation Program window, and then remove the CD-ROM from the drive.

Continue

Macintosh OS 8.6 to 9.x

- 1 Make sure the Macintosh is properly connected to the network, and then turn it on. Make sure the printer and print server are still on.

- 2 Put the EPSON Printer Software CD-ROM in the drive.

- 3 Double-click the **EPSON** icon in the CD-ROM window.

The EPSON Installation Program window appears.



- 4 Double-click **Install EPSON Stylus C82N Printer Driver**.

- 5 Follow the on-screen instructions to install the driver, and then restart the Macintosh.

- 6 After the computer restarts, open the Chooser.

- 7 Select the **C82 Series** icon, set **Background Printing** to **On**, and then close the Chooser.



- 8 Optionally, double-click the **EPSON** icon in the CD-ROM window to open the EPSON Installation Program window, and then do any of the following:

- Install the printer movies and *Reference Guide*. To do this, double-click **Install Printer Movies and Reference Guide**. Then, double-click the **EPIC** icon on the desktop to view the printer movies or the *Reference Guide*.
- Install the EPSON Software Film Factory, a photo management program. To do this, double-click **Install EPSON Software Film Factory** (you may have to scroll down to see this option), and then follow the on-screen instructions.
- View the print server *Administrator's Manual*. To do this, double-click **View Administrator's Manual**. If you don't have Adobe Acrobat Reader, install it when prompted.

- 9 Click the icon to close the EPSON Installation Program window, and then remove the CD-ROM from the drive.

Macintosh OS X


- 1 Make sure the Macintosh is properly connected to the network, and then turn it on. Make sure the printer and print server are still on.

- 2 Put the EPSON Printer Software CD-ROM in the drive. Double-click the **EPSON** icon on the desktop to open the CD-ROM window.

- 3 Double-click the **C82Series** icon in the CD-ROM window.



If you set up an administrator password when you installed OS X, you see this screen:

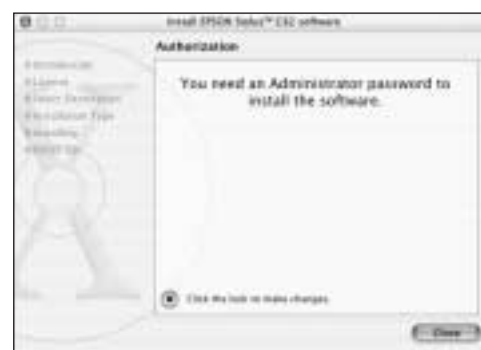

Click the lock icon, type your administrator name and password, and then click **OK**.

- 4 Follow the on-screen instructions to install the driver, and then restart the Macintosh.

- 5 Open the **Applications** folder on your OS X drive, open the **Utilities** folder, and then double-click the **Print Center** icon.


- 6 If there are no printers in Print Center, the following dialog box appears. Click **Add**.



If the Printer List window appears, click **Add Printer**.

Macintosh OS X continued

- 7 Select **EPSON AppleTalk** in the list at the top of the dialog box, click your printer in the list that appears, and then click **Add**.

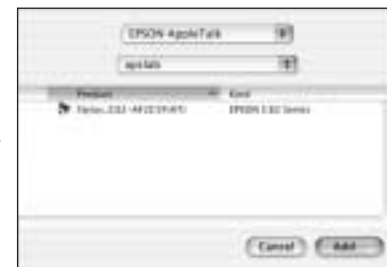

Your printer appears in the Printer List window.



- 8 Close Print Center.

NOTE: Make sure you select the **Stylus C82** in the *Print Setup* dialog box in the applications you use.

- 9 Optionally, do any of the following:

- Install the printer movies and *Reference Guide*. To do this, double-click **Printer Information Center** in the CD-ROM window and follow the on-screen instructions. Then, double-click the **EPSON Printer Information** icon on the desktop to view the printer movies or the *Reference Guide*.
- Install EPSON Software Film Factory, a photo management program. To do this, double-click **Film Factory Installer** in the CD-ROM window and follow the on-screen instructions.
- View the print server *Administrator's Manual*. To do this, double-click **Administrator's Manual.pdf** in the CD-ROM window.

- 10 Remove the CD-ROM from the drive.

7 Questions?

Here's where to look for answers:

Printer Basics book

Learn about loading paper, printing, maintaining the printer, solving problems, and contacting EPSON.

Supplement booklet

Tells you how to install printer software on Windows Me, 98, and 95, and provides general information about the network software utilities. The *Supplement* also includes instructions for turning Status Monitor off and on.

Printer movies and Reference Guide

Learn more about using the printer. Double-click the **EPIC** icon (Windows, Mac OS 8.6 to 9.x) or the **EPSON Printer Information** icon (Mac OS X) on the desktop, and then click either **Print Show** or **Reference Guide**. If you have not installed these, see section 6, "Install Software," for instructions.



EpsonNet External Print Server Administrator's Manual

Provides information about using the print server, network utilities, and other operating systems and network protocols (NetWare, NetBEUI, OS/2, UNIX, and others). Double-click **View Administrator's Manual** in the EPSON Installation Program window (Windows, Mac OS 8.6 to 9.x) or double-click **Administrator's Manual.pdf** in the printer software CD-ROM window (Mac OS X).